


# HROE (option) Jumper Diagram

## Polarity and Pad Functions

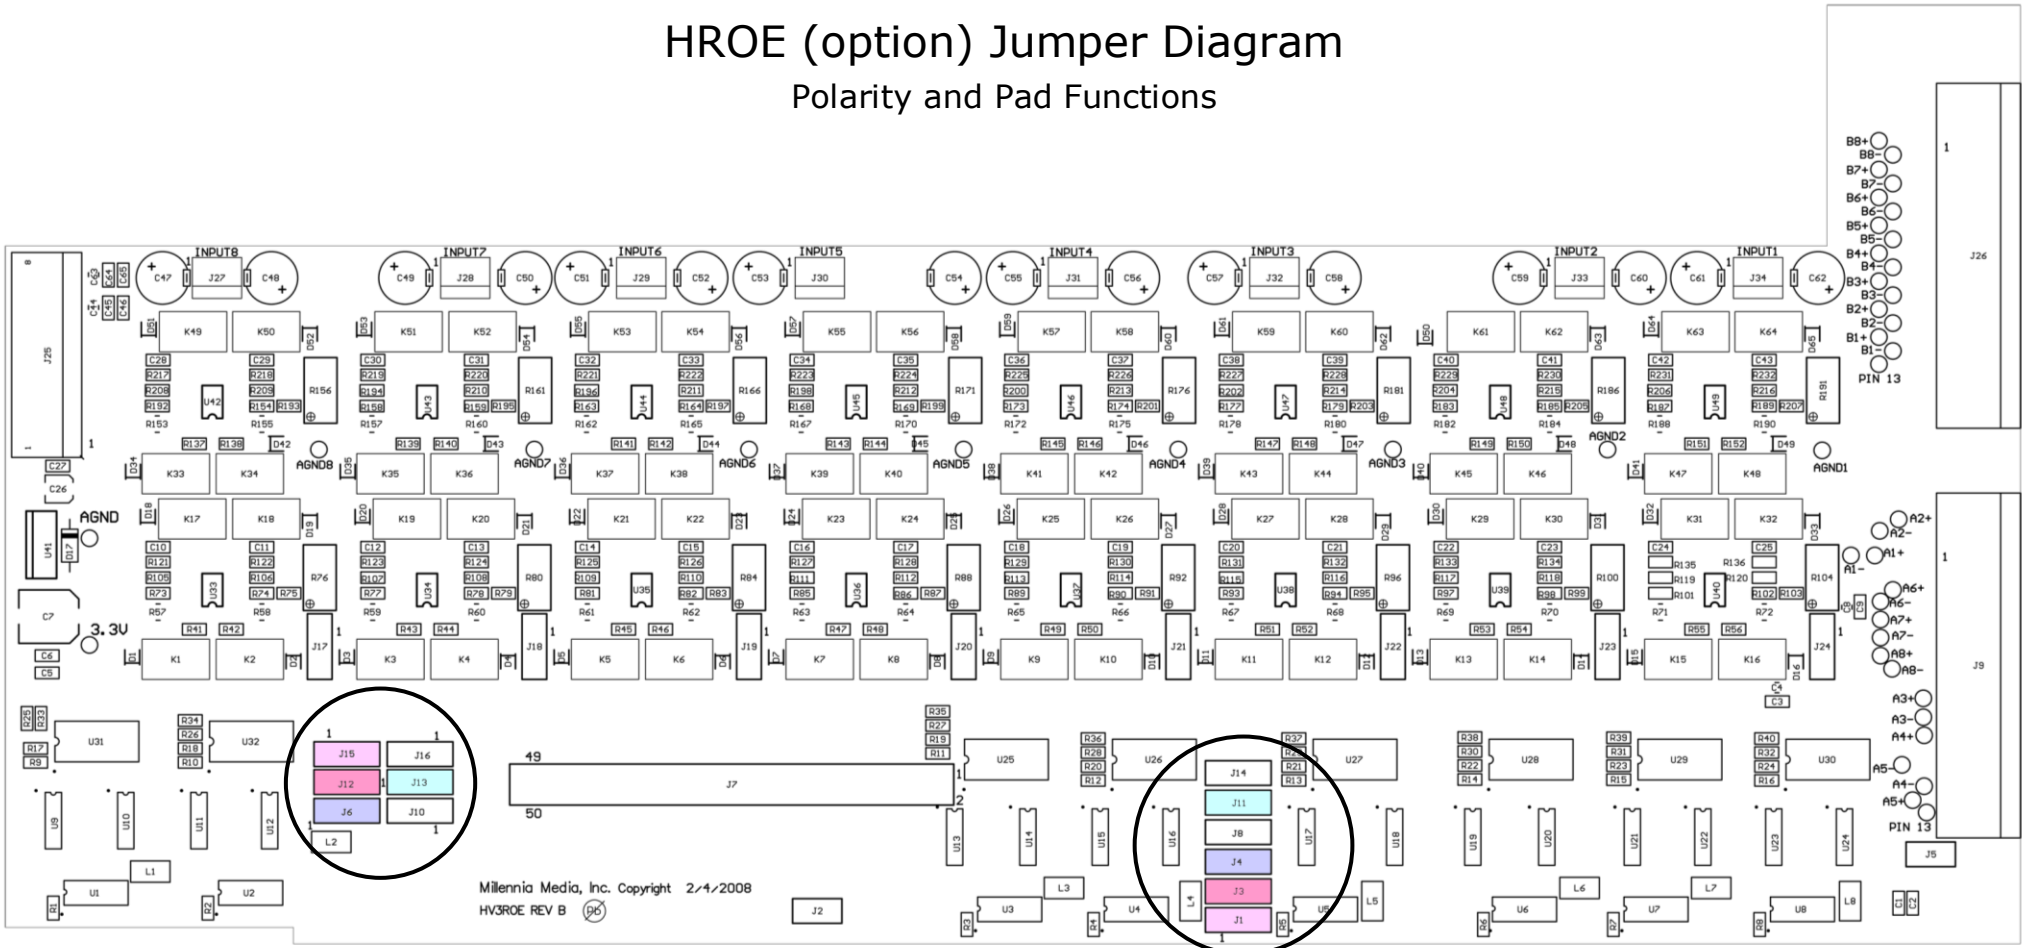

- The XLR outputs are A. They are locally or remotely controlled.
- The Polarity and Pad on Outputs B and C can be configured to either follow A or remain fixed at the values below by moving the associated jumpers.

Channels	B 1-4	B 5-8	C 1-4	C 5-8
<b>*Polarity Follows A</b>	J1 Pins 1,2	J15 Pins 1,2	J3 Pins 1,2	J12 Pins 1,2
<b>Polarity Fixed</b>	J1 Pins 2,3	J15 Pins 2,3	J3 Pins 2,3	J12 Pins 2,3
<b>*Pad Follows A</b>	J11 Pins 1,2	J13 Pins 1,2	J4 Pins 1,2	J6 Pins 1,2
<b>Pad Fixed at -13.5 dB</b>	J11 Pins 2,3	J13 Pins 2,3	J4 Pins 2,3	J6 Pins 2,3

\*Default